The HEAD VENT SYSTEM



Automatic Marine Head Ventilation System

When a person enters the head, a motion sensor initiates the Head Vent System and starts the flow of air. The system then remains active while the head is occupied, and continues to run until several minutes after the head has been vacated.

